




INSTRUCTION SHEET: HSLMGxxxxx LED LINK LINE JACK RJ45 SHIELDED, CAT.6_A

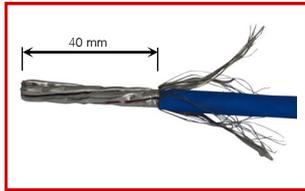


Strip 40 mm of the jacket and fold back braid, covering the jacket.

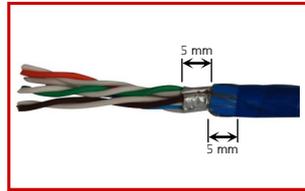

Fix the braid by use of insulating tape. 5 mm of braid have to remain uncovered to ensure the contact to the jack. Remove foil around pairs. 5mm of foil need to remain.

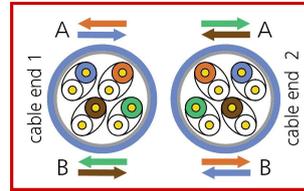


Cross the pairs acc. to TIA/EIA 568 A or TIA/EIA 568 B (see color-code on contact-block).

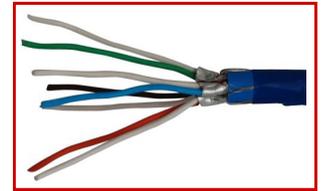

Open the twist of the pairs up to the foil.



Cut two pairs short by ca. 10 mm. Insert the shortened pairs.

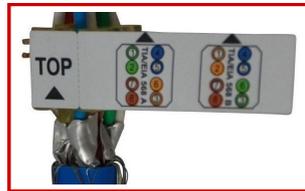

Insert the shortened pairs. Slip contactblock up to the foil.



Insert contactblock with cable into the plier HSLTOOL02.




Press down plier to the stop position.



Put assembled cable ...



... into the pull protector HSLTOOL03

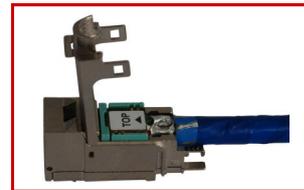

... or into the jack.



Fix jack to the cable by use of the included cable-tie.

LED LINK LINE JACK RJ45 SHIELDED CAT.6_A IN SCHRACK FORMAT A (SFA)

DESCRIPTION	ORDER NO.
WITH LED	
LED LINK LINE Jack RJ45 shielded Cat.6 _A , with LED, incl. contactblock for installationcable (SFA)	HSLMGMLI01
LED LINK LINE Jack RJ45 shielded Cat.6 _A , with LED, incl. contactblock for installationcable (SFA), 24 pieces	HSLMGMLI24
LED LINK LINE Jack RJ45 shielded Cat.6 _A , with LED, incl. contactblock for flexcable (SFA)	HSLMGMLF01
WITHOUT LED	
LED LINK LINE Jack RJ45 shielded Cat.6 _A , without LED, incl. contactblock for installationcable (SFA)	HSLMGOLI01
LED LINK LINE Jack RJ45 shielded Cat.6 _A , without LED, incl. contactblock for installationcable (SFA), 24 pieces	HSLMGOLI24
LED LINK LINE Jack RJ45 shielded Cat.6 _A , without LED, incl. contactblock for flexcable (SFA)	HSLMGOLF01

LED LINK LINE ACCESSORIES

DESCRIPTION	ORDER NO.
LED LINK LINE Linkfinder	HSLTOOL01
LED LINK LINE Plier	HSLTOOL02
LED LINK LINE Pull Protector 24 pieces	HSLTOOL03
LED LINK LINE Demount Tool	HSLTOOL04