



INSTALLATION INSTRUCTIONS OF THE LIGHT FITTINGS WITH SHADE ATTACHMENT BY BAYONET

1. by angular rotation counter-clockwise loosen the shade from the fixture




2. check, if the electrical supply is switched off

3.*take LED module out of the holders 1 → 2

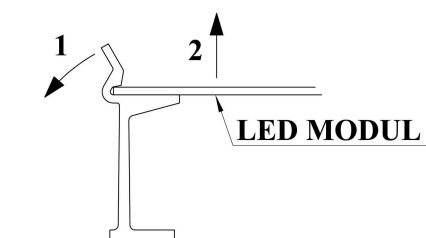


4. extend the input cable through opening in the fixture and fix it to the wall/ceiling by using screws using rubber pads (if included)

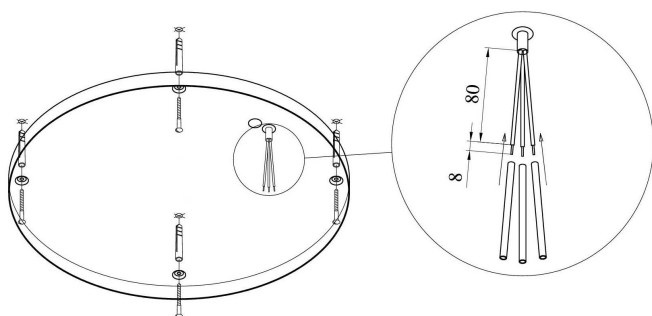


5. supply the input conductors with silicon sleeves (if included)

6. connect the input conductors

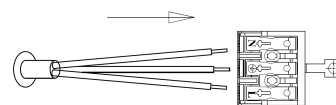


7.*insert LED module back into the brackets in the original position and snap into the brackets

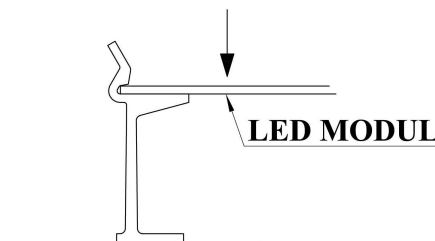

8.**install the light source (see label on the luminaire)

9. put the shade on and by angular rotate clockwise and slightly tighten

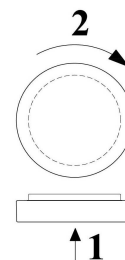

* Apply when install lights with LED module Osmont (for example L12, L13, L32, L43 ...).

CAUTION when handling the LED module and feeder cables to the LED module! Do not touch the LEDs!

** Apply when install the lights with incandescent or fluorescent source.

Electrical installation and safety:

Generally it is necessary to follow the EU regulations. At any revision or service activity it is necessary to disconnect lighting fitting from the electrical network. Only qualified and experienced person can do this work.