


■ DATA SHEET: MONITORING RELAYS UR6U1052

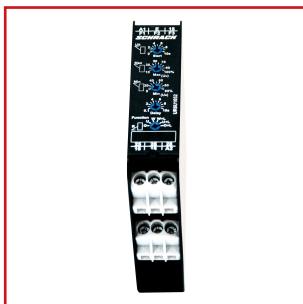

- AC/DC voltage monitoring in 1-phase mains
- Multifunction
- 16.6 to 400 Hz
- Fault latch
- Zoom voltage 24 to 240V AC/DC
- 2 change-over contacts
- Width 22.5 mm
- Industrial design

■ TECHNICAL DATA

1. Functions

AC/DC voltage monitoring in 1-phase mains with adjustable thresholds, timing for start-up suppression and tripping delay separately adjustable and the following functions (selectable by means of rotary switch)

| | |
|-------------|--|
| OVER | Overvoltage monitoring |
| OVER+LATCH | Overvoltage monitoring with fault latch |
| UNDER | Undervoltage monitoring |
| UNDER+LATCH | Undervoltage monitoring with fault latch |
| WIN | Monitoring the window between Min and Max |
| WIN+LATCH | Monitoring the window between Min and Max with fault latch |

2. Time ranges

| | |
|----------------------------|----------------------------|
| Start-up suppression time: | Adjustment range |
| Tripping delay: | 0s 10s 0.1s 10s |

3. Indicators

| | |
|--------------------|---|
| Green LED ON: | indication of supply voltage |
| Green LED flashes: | indication of start-up suppression time |
| Yellow LED ON/OFF: | indication of relay output |
| Red LED ON/OFF: | indication of failure of the corresponding threshold |
| Red LED flashes: | indication of tripping delay of the corresponding threshold |

4. Mechanical design

| | |
|--|---|
| Self-extinguishing plastic housing, IP rating IP40 | |
| Mounted on DIN-Rail TS 35 according to EN 60715 | |
| Mounting position: | any |
| Shockproof terminal connection according to VBG 4 (PZ1 required), IP rating IP20 | |
| Tightening torque: | max. 1Nm |
| Terminal capacity: | 1 x 0.5 bis 2.5 mm ² with/without multicore cable end 1 x 4 mm ² without multicore cable end 2 x 0.5 bis 1.5 mm ² with/without multicore cable end 2 x 2.5 mm ² flexible without multicore cable end |

5. Versorgungskreis

| | | |
|-------------------------|--------------------------------------|--|
| Supply voltage: | 24 to 240V AC/DC | terminals A1-A2 (galvanically separated) |
| Tolerance: | 24 to 240V DC 24 to 240V AC | -20% to +25% -15% to +10% |
| Rated frequency: | 24 to 240V AC 48 to 240V AC | 48 to 400Hz 16 to 48Hz |
| Rated consumption: | 4.5VA (1W) | 4.5VA (1W) |
| Duration of operation: | 100% | 100% |
| Reset time: | 500ms | 500ms |
| Wave form for AC: | Sinus | Sinus |
| Residual ripple for DC: | 10% | 10% |
| Drop-out voltage: | >15% of the supply voltage | >15% of the supply voltage |
| Overvoltage category: | III (in accordance with IEC 60661-1) | III (in accordance with IEC 60661-1) |
| Rated surge voltage: | 4kV | 4kV |

6. Output circuit

| | |
|---------------------------------------|---|
| 2 potential free change-over contacts | |
| Rated voltage: | 250V AC |
| Switching capacity (distance <5 mm): | 750VA (3A / 250V AC) |
| Switching capacity (distance >5 mm): | 1250VA (5A / 250V AC) |
| Fusing: | 5A fast acting |
| Mechanical life: | 20 x 10 ⁶ operations |
| Electrical life: | 2 x 10 ⁵ operations at 1000VA resistive load |
| Switching frequency: | max. 60/min at 100VA resistive load max. 6/min at 1000VA resistive load (in accordance with IEC 60947-5-1) |
| Overvoltage category: | III (in accordance with IEC 60664-1) |
| Rated surge voltage: | 4kV |

7. Measuring circuit

| | |
|-----------------------|---|
| Fusing: | max. 20A (in accordance with UL 508) |
| Measured variable: | DC or AC Sinus (16.6 to 400Hz) |
| Input: | 30V AC/DC 60V AC/DC 300V AC/DC |
| | terminals E-F1(+) terminals E-F2(+) terminals E-F3(+) |
| Overload capacity: | 30V AC/DC 60V AC/DC 300V AC/DC |
| | 100V _{eff} 150V _{eff} 440V _{eff} |
| Input resistance: | 30V AC/DC 60V AC/DC 300V AC/DC |
| | 47Ω 100Ω 470Ω |
| Switching threshold: | Max Min |
| | 10% to 100% von U _N 5% to 95% von U _N |
| Overtoltage category: | III (in accordance with IEC 60664-1) |
| Rated surge voltage: | 4kV |

8. Accuracy

| | |
|------------------------|-----------------------------------|
| Base accuracy: | ±5% (of maximum scale value) |
| Frequency response: | -10% to +5% (at 16.6 to 400Hz) |
| Adjustment accuracy: | ≤5% (of maximum scale value) |
| Repetition accuracy: | ≤2% |
| Voltage influence: | ≤0.5% |
| Temperature influence: | ≤0.1% / °C |

9. Ambient conditions


| | |
|------------------------|--|
| Ambient temperature: | -25 to +55°C (in accordance with IEC 60068-1) -25 to +40°C (in accordance with UL 508) |
| Storage temperature: | -25 to +70°C |
| Transport temperature: | -25 to +70°C |
| Relative humidity: | 15% to 85% (in accordance with IEC 60721-3-3 class 3K3) |
| Pollution degree: | 3 (in accordance with IEC 60664-1) |
| Vibration resistance: | 10 to 55Hz 0.35 mm (in accordance with IEC 60068-2-6) |
| Shock resistance: | 15g 11ms (in accordance with IEC 60068-2-27) |

FUNCTIONS

When the supply voltage U is applied, the output relays switch into on-position (yellow LED illuminated) and the set interval of the start-up suppression (START) begins (green LED U flashes). Changes of the measured voltage during this period do not affect the state of the output relay. After the interval has expired the green LED is illuminated steadily. For all the functions the LEDs MIN and MAX are flashing alternately, when the minimum value for the measured voltage was chosen to be greater than the maximum value.


Overtoltage monitoring (OVER, OVER+LATCH)

When the measured voltage exceeds the value adjusted at the MAX-regulator, the set interval of the tripping delay (DELAY) begins (red LED MAX flashes). After the interval has expired (red LED MAX illuminated), the output relays switch into off-position (yellow LED not illuminated). The output relays again switch into on-position (yellow LED illuminated), when the measured voltage falls below the value adjusted at the MIN-regulator (red LED MAX not illuminated). If the fault latch is activated (OVER+LATCH) and the measured voltage remains above the MAX-value longer than the set interval of the tripping delay, the output relays remain in the off-position even if the measured voltage falls below the value adjusted at the MIN-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relays switch into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

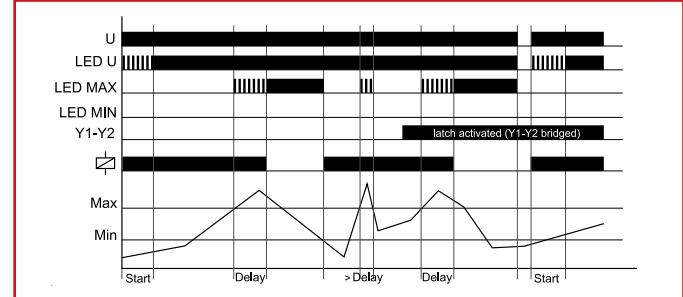

Undervoltage monitoring (UNDER, UNDER+LATCH)



When the measured voltage falls below the value adjusted at the MIN-regulator, the set interval of the tripping delay (DELAY) begins (red LED MIN flashes). After the interval has expired (red LED MIN illuminated), the output relays switch into off-position (yellow LED not illuminated). The output relays again switch into on-position (yellow LED illuminated), when the measured voltage exceeds the value adjusted at the MAX-regulator. If the fault latch is activated (UNDER+LATCH) and the measured voltage remains below the MIN-value longer than the set interval of the tripping delay, the output relays remain in the off-position even if the measured voltage exceeds the value adjusted at the MAX-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relays switch into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

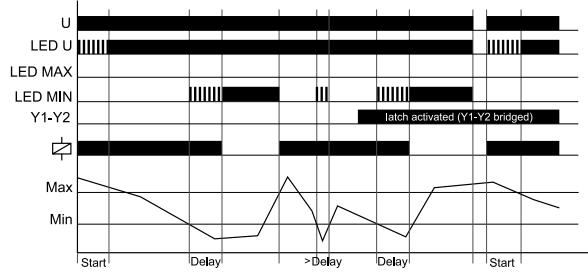

Window function (WIN, WIN+LATCH)


The output relays switch into on-position (yellow LED illuminated) when the measured voltage exceeds the value adjusted at the MIN-regulator. When the measured voltage exceeds the value adjusted at the MAX-regulator, the set interval of the tripping delay (DELAY) begins (red LED MAX flashes). After the interval has expired (red LED MAX illuminated), the output relays switch into off-position (yellow LED not illuminated). The output relays again switch into on-position (yellow LED illuminated) when the measured voltage falls below the value adjusted at the MAX-regulator (red LED MAX not illuminated). When the measured voltage falls below the value adjusted at the MIN-regulator, the set interval of the tripping delay (DELAY) begins again (red LED MIN flashes). After the interval has expired (red LED MIN illuminated), the output relays switch into off-position (yellow LED not illuminated).

If the fault latch is activated (WIN+LATCH) and the measured voltage remains below the MIN-value longer than the set interval of the tripping delay, the output relays remain in the off-position even if the measured voltage exceeds the value adjusted at the MIN-regulator. If the measured voltage remains above the MAX-value longer than the set interval of the tripping delay, the output relays remain in the off-position even if the measured voltage falls below the value adjusted at the MAX-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relays switch into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

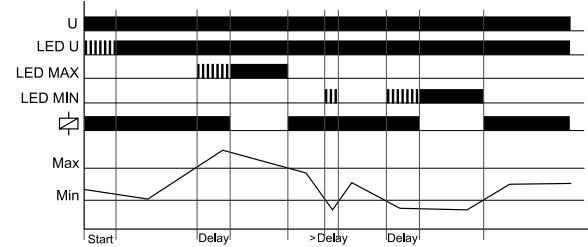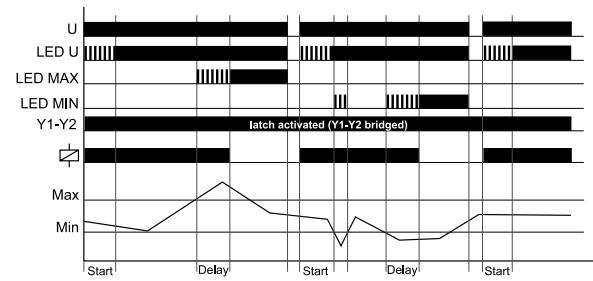


CONNECTIONS


Range 30V, supply voltage 24V AC/DC and fault latch

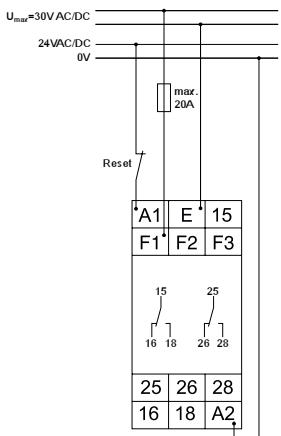

Range 60V, supply voltage 230V AC and fault latch

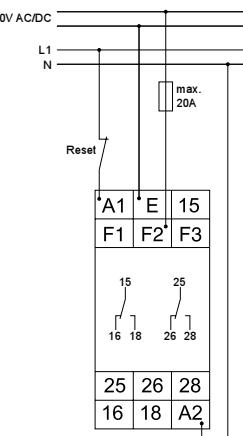

Range 300V, supply voltage 24V AC/DC and fault latch

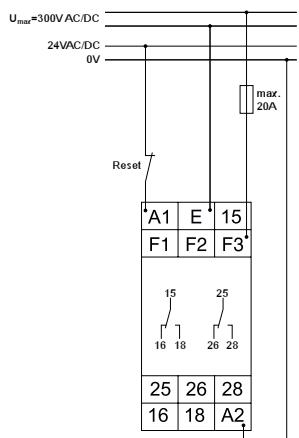

DIMENSIONS

